



Hotel Standard

2 Year
Warranty
Standard

Thank you for choosing a Burton Safe,
designed and made to help you
organise and protect your valuables.

All Burton safes are supplied with a 2
year warranty as standard.

www.burtonsafes.co.uk



Hotel Standard



CASH RATING
£ 1,000



JEWELLERY RATING
£ 10,000

User Instructions

About the lock

*The lock requires a 3-8 digit code to
open the lock. You can reset the code
anytime the safe is open.*

*You are provided with an emergency
over-ride key for this safe – Please do not
keep the keys inside the safe.*




Secure Your Valuables with a Burton Safe

www.burtonsafes.co.uk | +44 (0) 1484 663388 | enquiries@burtonsafes.co.uk
Brockholes Business Park, Rock Mill Road, Holmfirth, HD9 7BN




How to open the safe for the first time

- Open your safe with the emergency key, follow the steps under 'How to open your safe with the emergency key'
- Once open, open the battery cover on the inside of the door
- Insert 4x AA batteries
- Keep the safe door open

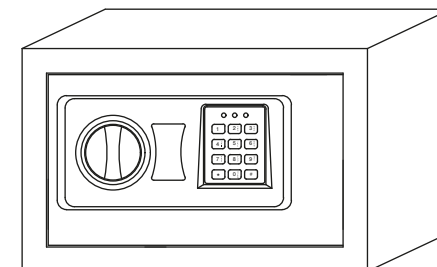


THE SURE DEFENCE

Schematic drawing of case

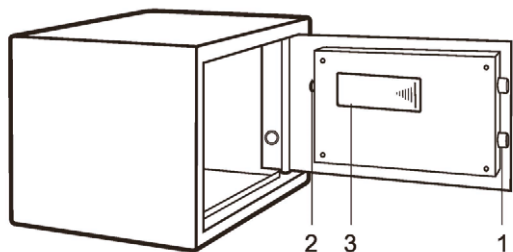

- ① Bolts ② Reset Button ③ Battery Compartment ④ Knob ⑤ Emergency Lock Cover
- ⑥ Green Light ⑦ Red Light ⑧ Yellow Light ⑨ Confirmation button

Schematic drawing of control panel

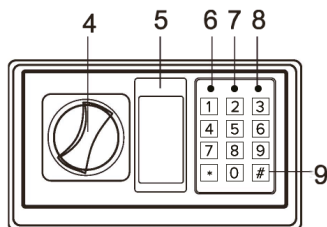


How to program a code

- Open the safe door
- Press the reset button (This button is located on the inside of the safe door by the hinges)
- Enter a 3-8 digit code followed by the [#] key
- If the lock beeps twice the code is set, if the yellow light flashes and the lock beeps 3 times, the code has not been set. Try again

How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle to retract the bolts)
- Gently push the door shut. Always ensure that there are no objects or fingers in the way of the closing door
- Turn the handle until the stop position is reached

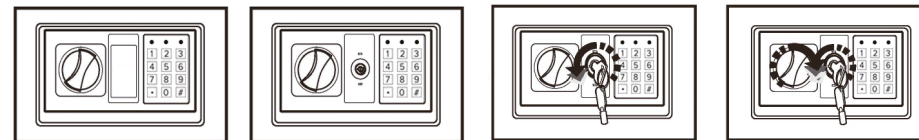

How to open the safe with the emergency key

- Remove the emergency key cover on the front of the key pad
- Insert the emergency key into the lock. The key will only fit into the lock in 1 position. Do not force the key
- Turn the key clockwise then rotate the handle until the bolts are fully retracted
- Open the safe door

Battery change


- This safe requires 4x AA batteries to operate
- The battery compartment is located on the inside of the safe door
- Burton Safes recommends Duracell batteries

Setting master code

- With the safe door in the open position, press 0 twice and now press the reset button on the hinge side of the door
- The yellow light should now be on
- Now enter your new master 3-8 digit code followed by the [#] key
- If the lock beeps twice and the yellow light flashes twice the code is set
- If the lock beeps 3 times and the yellow light flashes 3 times, the code has not been set. Please try again

Fixing method

- Drill holes for expansion bolts
- Turn the expansion bolts counter clockwise to separate
- Use the expansion bolts to secure the safe to the floor or wall
- Make sure the safe is positioned as required and then tighten all screws

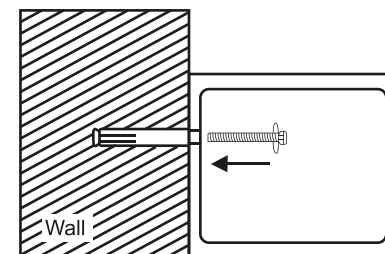

How to open the safe

- Enter your 3-8 digit code followed by the [#] key
- Rotate the handle until the bolts are fully retracted
- Open the safe door

Incorrect entry

- After 3 incorrect entries a warning beep will sound for 20 seconds. During this time no other code entries can be made
- When the beeps have stopped, try again

CAUTION: Only use the expansion bolts when there is a concrete surface. Use alternative fixings when there is a wooden surface.