

# DigitalXL

HIGH SECURITY KEY SAFE

## FITTING YOUR KEYGUARD

Tools



To fit your Keyguard XL you will need the following tools:

- Power Drill
- 5mm Masonry Drill Bit
- Small Socket Driver
- 8mm Socket Head
- Marker Pen



**NOTE:** Your Keyguard XL should be fitted to a solid surface. We recommend brickwork, stone or concrete

Fixing holes



• To start use the rubber cover as your template to mark the fixing holes on the wall. Ensure you choose a location that allows the best possible fixing e.g. the centre of a brick. N.B. You must never fix into the mortar

 


5 mm



• Now use the 5mm drill bit to make a hole 55mm deep in each of the marked fixing holes

Place



• Place the Keyguard XL inside the rubber case

• Open the door of your Keyguard XL and place the whole unit onto the wall lining up the holes



• Push the bolts that have been supplied with your Keyguard XL into each of the holes

• Tighten each bolt fully using a socket set



## TROUBLESHOOTING



Vertical Position



Clear Button



• Once the fitting is complete if the door closes but does not lock, test locking it when the door is in the open position. If it works, it is likely that the fixing bolts are protruding too far into the Keyguard XL. Try to secure them further into the wall and close the door again

• If the buttons will not press, ensure that the dial is in the vertical position

• If your code does not work, press the "clear" button and start again



Burton Safes offer a range of fixing bolts to suit different applications that retain the security specification:

- Fixing kit - anchor bolt



- Fixing kit - concrete screw with pan head



- Fixing kit - concrete screw 75 mm (for rendered walls)



- Fixing kit - concrete screw 100 mm (for rendered walls)



If you require the fitting instructions for any of the above please visit the website

[www.burtonsafes.co.uk/products/keyguard-digital-xl/](http://www.burtonsafes.co.uk/products/keyguard-digital-xl/)



# DigitalXL

HIGH SECURITY KEY SAFE

Instruction booklet  
Standard fixing bolts

**BURTON  
SAFES**



**Burton Security Limited**

Brockholes Business Park

Rock Mill Road

Holmfirth HD9 7BN

[www.burtonsafes.co.uk](http://www.burtonsafes.co.uk)

**BURTON  
SAFES**

 
# DigitalXL

HIGH SECURITY KEY SAFE

Rubber Cover Clear Button Dial




## OPENING YOUR KEYGUARD XL FOR THE FIRST TIME



- Remove unit from the box and place it on its back
- Pull the rubber cover open
- Make sure that the dial is in the vertical position
- Press and slide the "clear" button (the ridged black button pictured below)




 - Release the clear button



- Turn the dial clockwise 360 degrees, until it clicks
- Pull the door open

## SETTING YOUR CODE

 

- With the door open, turn the dial anti-clockwise, until it clicks making sure the bolt is in the locked position



- You MUST have the bolt locked in order to change the code.



- Stand the Keyguard XL upright, keeping the door open
- Using a phillips screwdriver, remove the screw securing the black plastic plate



Use screwdriver



Screw removed

6 1  
7 2  
8 3  
9 4  
0 5  
A B

- Choose a personal code which must be between 3 and 8 digits. NOTE: You may only use each number/letter once
- Using a flat head screwdriver, rotate each button in your code 180 degrees, so that the arrow on each one faces the SET position



Not Set




Set


- Re-secure the black plastic plate with the small screw, make sure you leave the door open to check your code



## CHECKING YOUR CODE

 

 - With the door still open, make sure the Keyguard XL is locked by rotating the dial anti-clockwise 360 degrees, until it clicks



- Make sure the dial is in the vertical position
- Press and slide the clear button down and then release the button
- Use the keypad to input your chosen code

1 2 3 4 5 6 7 8 9 0 A B

- Turn the dial clockwise until it clicks
- If it opens, Keyguard XL is ready to use

## CHANGING YOUR CODE



- Open your Keyguard XL as normal
- With the door open, turn the dial anti-clockwise, until it clicks making sure the bolt is in the locked position
- You MUST have the bolt locked in order to change the code.



Not Set

- Using a phillips screwdriver, remove the screw securing the black plastic plate
- You will need to turn the disk of each number in your previous code until the arrow faces the NOT SET position

- You can now repeat All of the steps in the section marked 'SETTING YOUR CODE' and 'CHECKING YOUR CODE'

## OPENING YOUR KEYGUARD NORMALLY

Vertical Position



- Ensure that the dial is in the vertical position (shown in the image below)



- Enter your code

1 2 3 4 5 6 7 8 9 0 A B

Clear Button



- If you enter your code wrong, press and slide the "clear" button down and then release the button. You can now re-type your code
- Rotate the dial clockwise 360 degrees, until it clicks
- Pull the door open

## LOCKING YOUR KEYGUARD NORMALLY



- Close the door and lock it by turning the dial anti-clockwise 360 degrees. It should click at least once
- Ensure that it has locked properly by turning the dial clockwise 360 degrees until it clicks. Try and open the door, if it does not open your Keyguard XL is now fully secure
- Close the lid of the rubber cover

LOCKED



## TROUBLE SHOOTING

Vertical Position



- The dial must be in the vertical position to use the code buttons

1 2 3 4 5 6 7 8 9 0 A B



Set



Not Set



- If your code hasn't worked, ensure you press the "clear" button before entering the code again
- Ensure that the arrow on the dial of each button is in the "set" position when setting your code
- Ensure that all numbers not in your code have their dials facing the "not set" position
- Ensure that the black plastic plate is properly and securely refastened
- You may find that when you turn the dial you feel some resistance, do not worry, this is normal.

