



burtonsafes.co.uk



INSTRUCTIONS
**PIONEER
KEY LOCKING**

Version 1 - P1 - 1/10/2023

INSTRUCTIONS
KEY LOCKING

ABOUT THE KEY LOCK

The safes are supplied with 2 keys. Keep the keys in a secure place - but not in the safe! If both keys are lost, the safe will have to be forced open.

Please note that the key will only fit inside the lock in one position. Do not force the key into the lock.

How to open the safe

- Insert the key into the key hole
- Turn the key clockwise until it stops
- Rotate the handle until the bolts are fully retracted
- Open the door

NOTE: If your safe has dual key locking you must unlock the top lock first. If you have a dual key and electronic locking safe, unlock the key lock first then follow the Burton Duo instructions in the booklet for the electronic lock.

How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle until the bolts are fully engaged
- Turn the key anti-clockwise until it stops
- Remove the key from the lock

Installation Guidelines for Freestanding Safes



When fixing your safe, it is important that it is fitted against a solid wall or concrete floor.
Follow our guide below and for more information and guidance visit our website.