

Instructions

COMPANION *Fingerprint Safe*



£3,000 Cash Rating




£30,000 Jewellery Rating



Biometric





Electronic

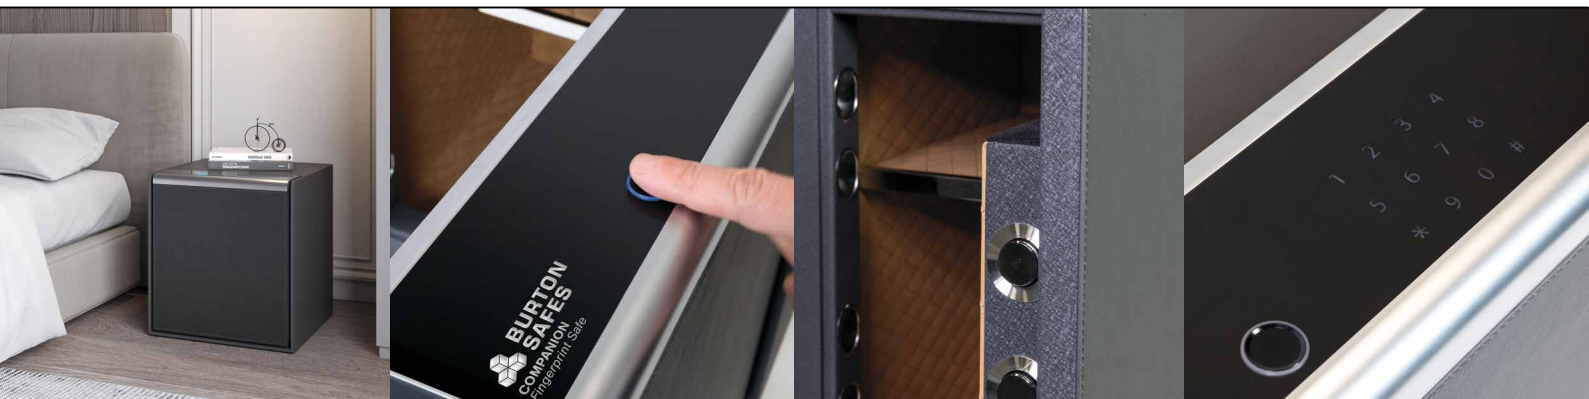

THE IDEAL COMPANION SAFE

- Access the safe using a fingerprint or PIN code
- Up to 50 fingerprints and PIN codes can be programmed
- User programmable 6 digit PIN code
- Anti-bump motorised locking bolts
- Faux leather lined door in grey
- Faux-leather lined with diamond stitching
- Comes with a fixed height shelf
- Low battery warning
- Emergency opening using a USB-C cable
- Features an internal LED, key hooks and a document holder
- Back and base fixing

1. Diagram Of Companion - Fingerprint Safe

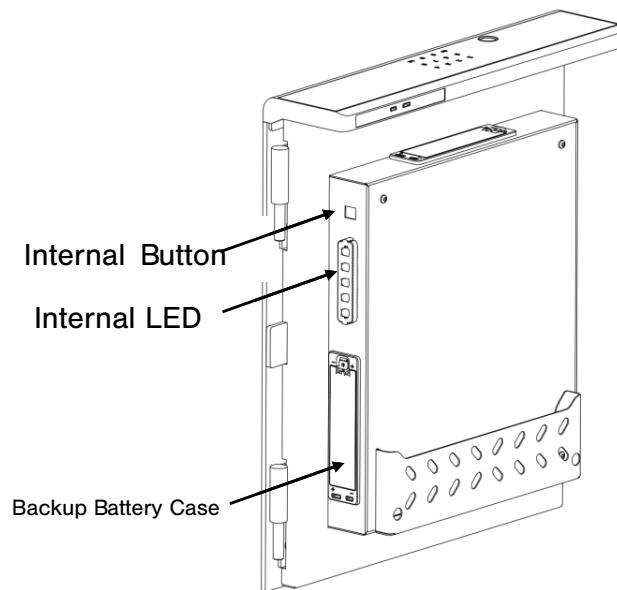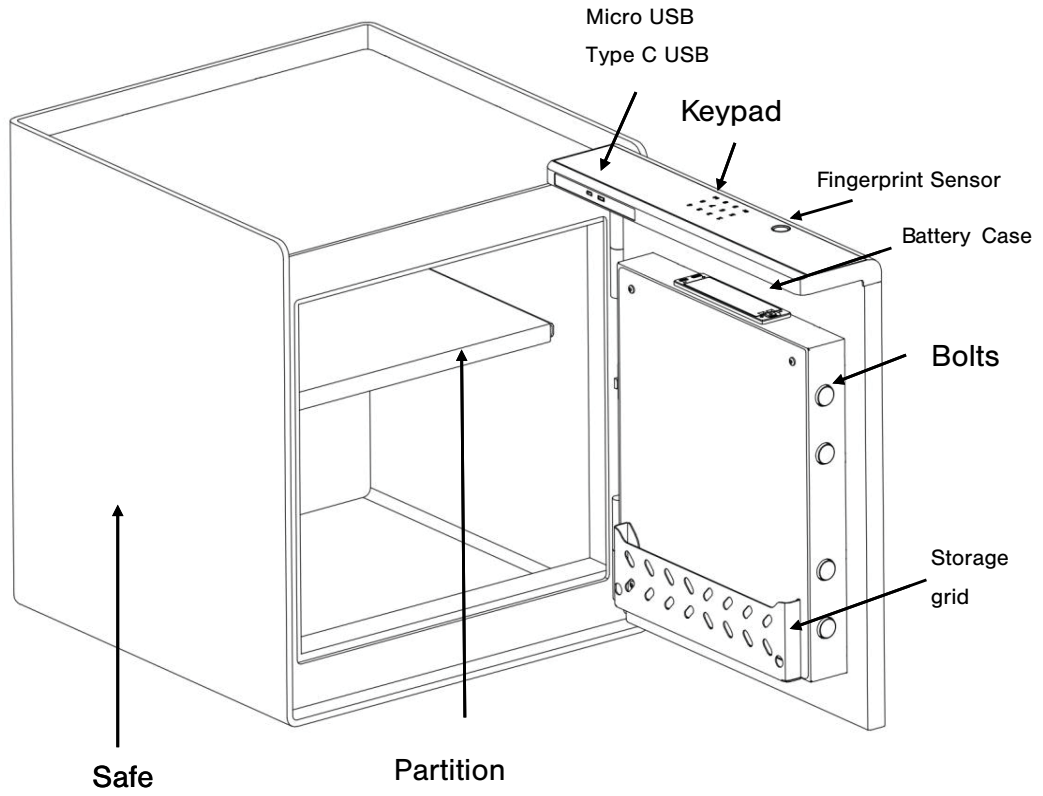

Unboxing

The safe is under factory setting, put your finger on the sensor or enter **123456** then press #, you will hear “**Under factory setting, open**”, the door will be opened, then put your finger on the sensor, you will hear “**Closed**”, the door will be closed.



Please add your password and fingerprint as soon as possible when you get your new safe.



Always test your new code or fingerprint with the door in the open position.

Fingerprint Or Password Registration

- 1) Opening the door, press the internal button, you will hear “**Please put your finger on scan sensor or enter your user code**”.
- 2) Enter your 6 digits password
- 3) Press # or put your finger on scanner, you will hear “**Please do again**”, do the operation and follow the prompt voice, finally you will hear “**Registration complete**”.

*Note: Opening the door and press the button within 15 seconds, otherwise you will hear “**Operation Failed**”.*

Note: Only one fingerprint or one password can be set at a time, the safe can store 50 fingerprints and passwords in total.

Open The Door

Placing your registered finger on the sensor or enter your password then press #, you will hear “**Verification complete**”, the door will be opened.

Close The Door

Put your finger on the sensor or press # you will hear “**Closed**”, the door will be closed.

Reset

Opening the door, press the internal button within 15 seconds and hold on for 8 seconds, you will hear “**Di**”, release your finger, you will hear “**reset complete**”.

Voice On/Off

Entering **6665554** and press #, the voice will be shut off, then when you touch the keypad, there will be a flash on the numbers. Enter **666555** and press # again, you will hear **“Operation complete”**, voice will now be set to on.

*Note: If the wrong fingerprint has been placed 5 times or enter wrong password 5 times in a row, you will hear **“System locked”**, the sensor and keypad will be locked for 5 minutes.*

Battery Low

When you open the door, if you hear **“battery low”**, please replace the batteries asap.

If the battery is low and you cannot open the door, please use a power bank or mobile charger to power on the safe through the **Type-C** port.



Please change your battery every year.



Secure Your Valuables with a Burton Safe

 **BURTON
SECURITY**



THE SURE DEFENCE

www.burtonsafes.co.uk | +44 (0) 1484 663388 | enquiries@burtonsecurity.com
Brockholes Business Park, Rock Mill Road, Holmfirth, HD9 7BN