



burtonsafes.co.uk



**BURTON
SAFES**

LOCKING INSTRUCTIONS

CombiLock Simplex

**UK
CA** **CE**


CombiLock Simplex

ABOUT THE LOCK

This lock is operated with a 6-digit code. You can program two different codes, a master code and a user code

How to open the safe

- Enter a valid 6-digit code (The factory master code default is '123456')
- If the code has been entered correctly the lock will beep one time and the green light will start flashing
- Whilst the green light is flashing rotate the keypad into the open position. You have approximately 10 seconds to do this

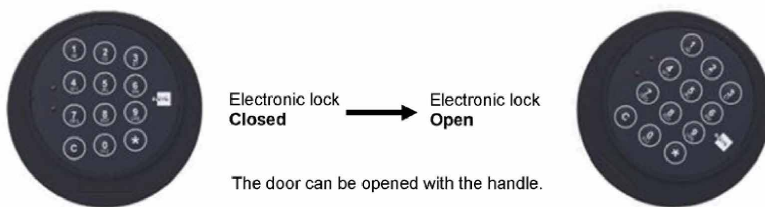

- Turn the handle clockwise to open the safe door

Incorrect Entry

- If an incorrect code has been entered, it will be followed by a series of short beeps and the red light will show for 3 seconds
- After 3 incorrect entries, a penalty time of 10 seconds will begin. During this time, no other code entries can be made. Any further incorrect entries will trigger a longer penalty period, first 20 seconds, then 30 seconds and so on.
- When the penalty time is over the red light will stop flashing and now you can enter a valid 6 digit code

How to close the safe

- Ensure that the bolts are fully retracted (If necessary rotate the handle clockwise to retract the bolts)
- Gently push the door closed, ensuring that there are no objects in the way
- Turn the handle anti-clockwise until the stop position is reached
- Turn the keypad to the closed position
- Rotate the keypad to ensure it's fully locked

NOTE: If you open and close the safe within a few seconds you will need to wait 10 seconds before entering a valid code.

Changing your master code

- Unlock and open the safe door
- Within 10 seconds enter *0* (Star-Zero-Star)
- Enter the current master code (Default 123456) and press * (Star)
- Now enter the new 6-digit master code and press * (Star)
- Again to confirm enter the new 6-digit master code and press * (Star)

Note: The green light will flash and the lock will beep when the new user code has been accepted. With the safe door opened check your new code a few times before you shut the safe door

Adding the user code / Changing the user code (using the master code)

- Unlock and open the safe door using the master code
- Within 10 seconds Enter *1* (Star-One-Star)
- Enter the current master code (Default 123456) and press * (Star)
- Now enter the new 6-digit user code and press * (Star)
- Again to confirm Enter the new 6-digit user code and press * (Star)

Note: The green light will flash and beep when the new user code has been accepted. If the red light flashes and the lock beeps this means the new user code hasn't been accepted.

Deleting the user code (Using the master code)

- Unlock and open the safe door using the master code
- Within 10 seconds enter *1* (Star-One-Star)
- Enter the current master code (Default 123456) and press * (Star)
- Press * (Star) again
- The user code is now deleted

Switching on timed delay

- Unlock and open the safe door using the master code
- Within 10 seconds enter *3* (Star-Three-Star)
- Enter the current master code (Default 123456) and press * (Star)
- The length of time delay can be specified at anything from one minute to ninety nine minutes. For a duration of 1 minute press 01* (Zero-One-Star) for 99 minutes press 99*(Nine-Nine-Star)

Note: The green light will flash and the lock will beep when the timed delay has been accepted. If the red light flashes and the lock beeps this means the timed delay hasn't been accepted.

Open lock with timed delay

- Enter the master code or user code.
- Wait until the time you have set ends, the lock will beep 15 times the green light will flash then enter master code or user code for the second time.

If you enter an incorrect code or press C during the time delay period you will have to start this process again from the beginning

Switching off the time delay function

- Enter the master code
- Wait until the time delayed ends
- Enter the master code again, unlock and open the safe door
- Within 10 seconds enter *3* (Star-Three-Star)
- Enter the current master code (Default 123456) and press * (Star)
- Enter 00* (Zero-Zero-Star)

Note: The green light will flash and the lock will beep when the timed delay has been switched off. If the red light flashes and the lock beeps this means the timed delay hasn't been switched off.

Current supply / Battery change

A series of beeps indicates that the battery is weak and must be replaced. Only use X2 AA ALKALINE batteries. (Burton Safes recommend the Duracell brand).

The batteries are located behind the keypad.

Insert the the battery removal tool in the hole at the top of the keypad and push down firmly - the keypad will open. Take care when changing batteries to ensure that no cables are damaged. Once the batteries have been replaced push the keypad back into the closed position.

Note: You will need to enter the code twice to open

Installation Guidelines for Freestanding Safes



When fixing your safe, it is important that it is fitted against a solid wall or concrete floor. Follow our guide below and for more information and guidance visit our website.