



Installation instructions

**ENHANCE
YOUR HOME
SECURITY**



The 1st garage door defender available **tested to this level**

www.burtonsafes.co.uk

Brockholes Business Park,
Rock Mill Road, Holmfirth, HD9 7BN

**BURTON
SECURITY**


Product Contents

- 1 Garage Guard Body
- 2 Anchor Plate
- 3 Ground Bolts
- 4 Padlock



Tools required for fitting

- 1 Hammer drill
- 2 12mm Masonry Drill Bit
- 3 5mm Hex socket or 5mm allen key
- 4 Marker Pen

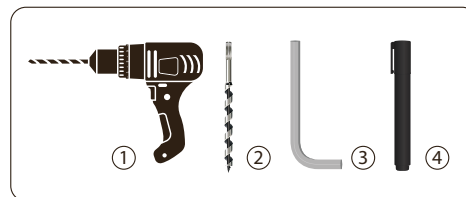

NOTE: Your Garage Guard should be fitted to a solid concrete surface. We recommend a minimum of 100mm thickness.

FIXING INSTRUCTIONS

STEP 1

Place the complete unit in front of the garage door, with the round bar facing the door.
(We recommend a minimum distance of 5mm from garage door and a maximum distance of 30mm).

STEP 2

Now remove the main body from the base plate being careful not to move the base.

STEP 3

Ensure the garage door swings clear of the padlock lug.
Using the base plate mark through the 4 countersunk fixing holes ensuring marks are visible.

STEP 4

Using a 12mm masonry drill bit drill the marked holes to a depth of 75mm and clean the dust from the holes.

STEP 5

Insert the ground bolts into the drilled holes and then remove the 4 bolts, leaving the sleeves inserted in the concrete floor.

STEP 6

Place the anchor plate on top to line up with the inserted floor sleeves and insert the countersunk bolts through the anchor plate into the floor sleeves.

STEP 7

Tighten the 4 anchor bolts to a torque of 15nm. Please tighten evenly.

*If the base plate will not fit under the garage door the plate can be recessed 5mm into the concrete.

*If you have blocks or tarmac outside the garage we would recommend excavating and putting down a concrete pad.

